



# Connection Diagram for HPS-120

## 1. TxD/RxD/GND

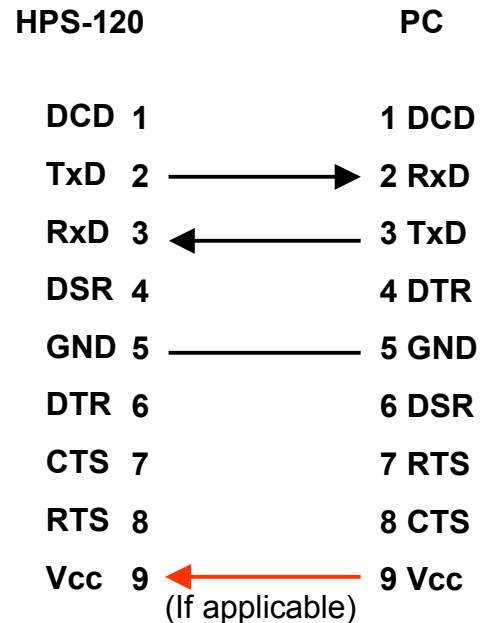


- The Flow Control shall be None at the HPS-120.

## 2. TxD/RxD/CTS/RTS/GND

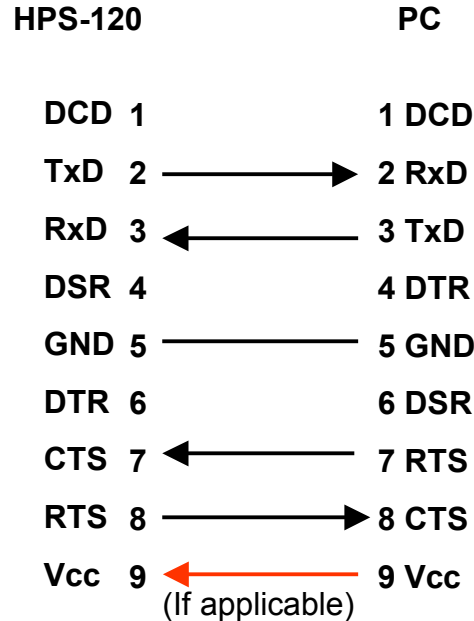

- The Flow Control shall be Hardware at the HPS-120.
- The Flow Control applies between the HPS-120 and PC (not over the air).
- If you want to pass it over the air, set the flow control to DTR/DSR with this diagram.

## 3. TxD/RxD/DTR/DSR/GND

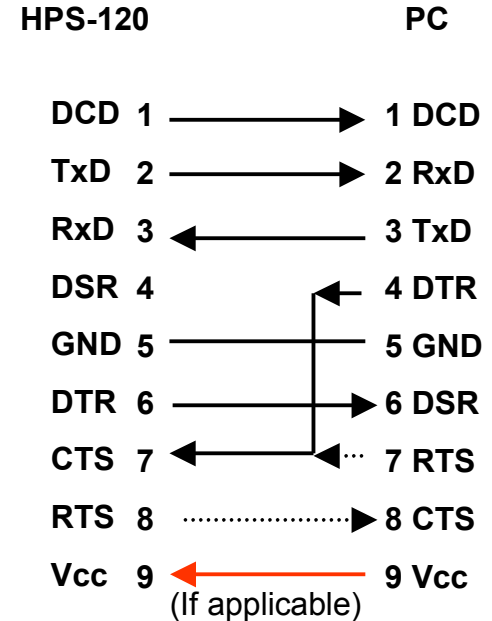

- The Flow Control shall be DTR/DSR at the HPS-120.
- The Flow Control applies end-to-end (over the air).
- If you want to use RTS/CTS and DTR/DSR, you should use this diagram.